

INSTALLATION GUIDE

Front Control Arm Rear Bushing

Instructions:

1. Place vehicle on hoist and remove wheels.
2. Remove the front control arms.
3. A press will be required to remove the bushings -
Once pressed out, check for any burrs or cracks in arm.
4. Please note image below displaying correct alignment of voiding in supplied bushing.
5. Once pressed in, add a small amount of the supplied grease to the ID and fit the supplied steel tubes.
6. Re-fit arms to vehicle.
7. A wheel alignment is recommended after install.
8. Re-check all bolts after initial 100km's travelled.

