


Instructions

Front Strut Top

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

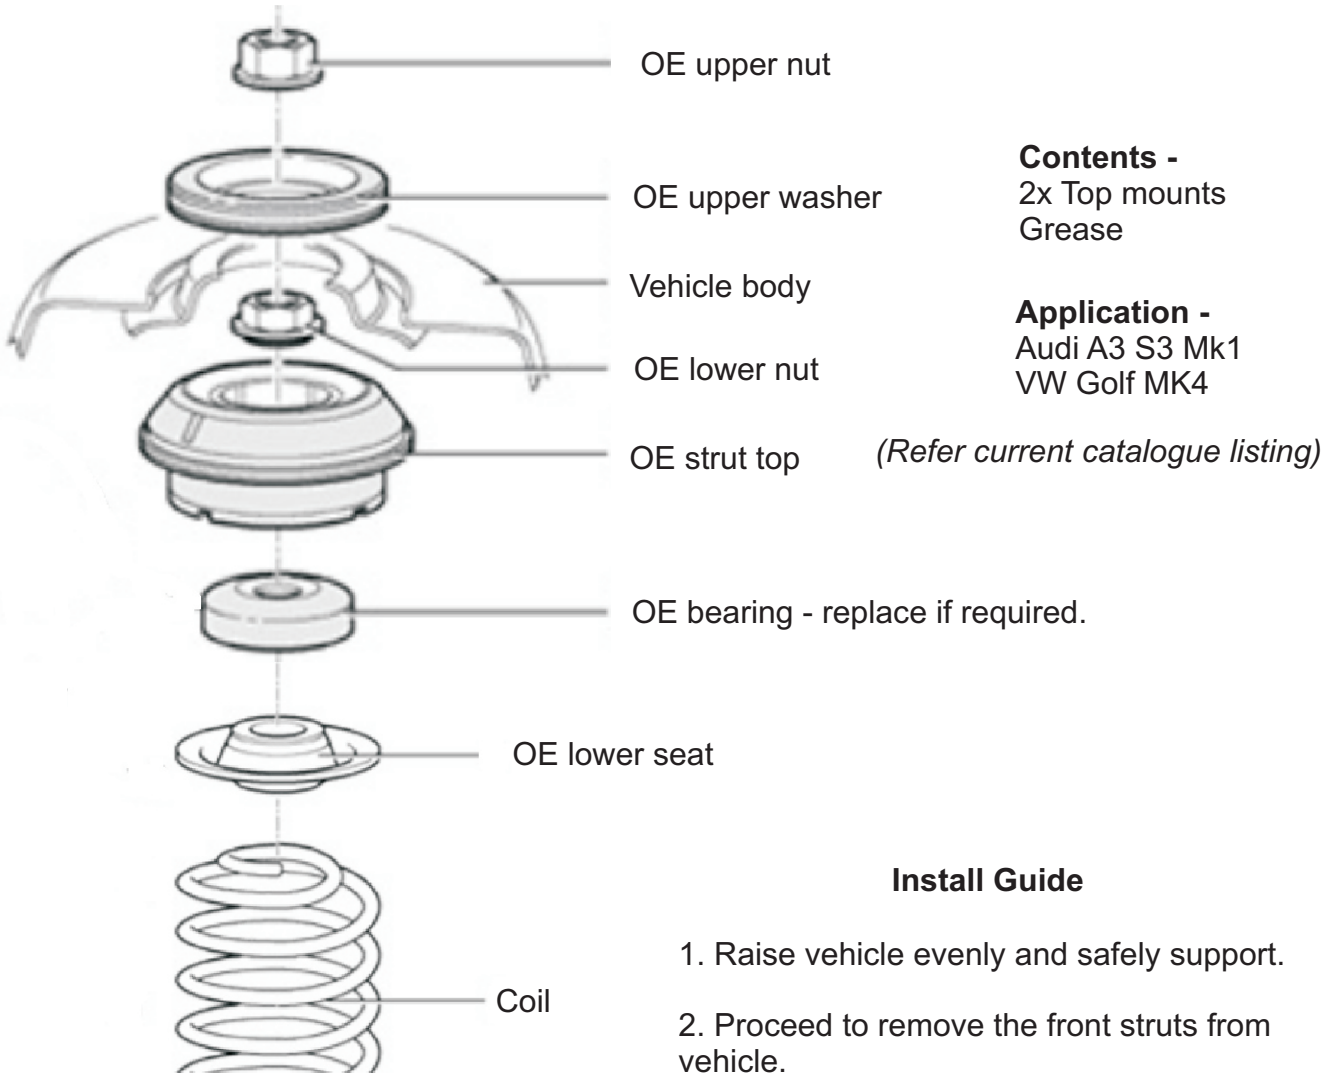

Note - only use a quality spring compressor when dismantling struts. A qualified person should perform this task.

3. Dismantle strut and remove OE strut top - check condition of OE bearing. Replace bearing if required.

4. Re-use all OE nuts and washers when reassembling - note small OD of supplied top mount should sit in OE lower spring seat.

5. Tighten nuts to manufacturers specs - a wheel alignment recommended.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.