

Instruction Sheet

Front Control Arm - Rear Bushings

Z6063

N.B: This instruction sheet should be used in conjunction with the workshop manual

Application - Toyota Landcruiser
- 100 Series

1. Raise vehicle evenly and safely support. (Always refer current catalogue for complete listings)

Never rely on a Jack only

2. Proceed to remove front wheels. Unbolt control arms from vehicle.

Contents - Bushing 90835 x2
- Bushing 90836 x2
- Steel tube 30x18.4x90 x2
- Grease

Note - the rear bushing is located in the chassis. To remove, this will require cutting or chiselling out.

3. Push new supplied bushings into clean chassis eye. Refer diagram below.



4. Grease bushing internal diameter and side faces with supplied grease only.

5. Push in supplied steel tubes.

6. Re-install arm to vehicle, tighten bolts as per manufacturer spec.

7. A wheel alignment will be required after install.

8. Re-check all bolts after 100-500kms

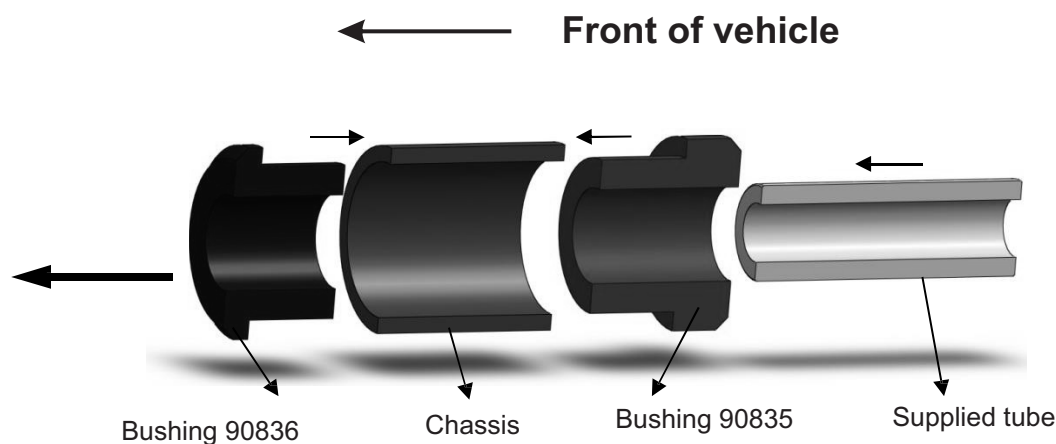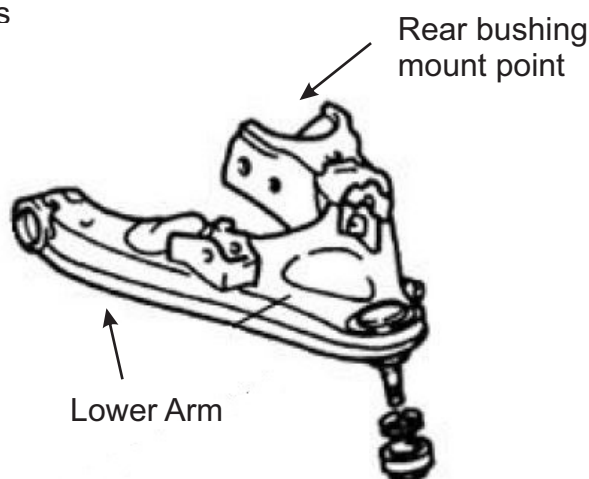

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.