


Instructions

Rear Swaybar Kit

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Careful of brake line

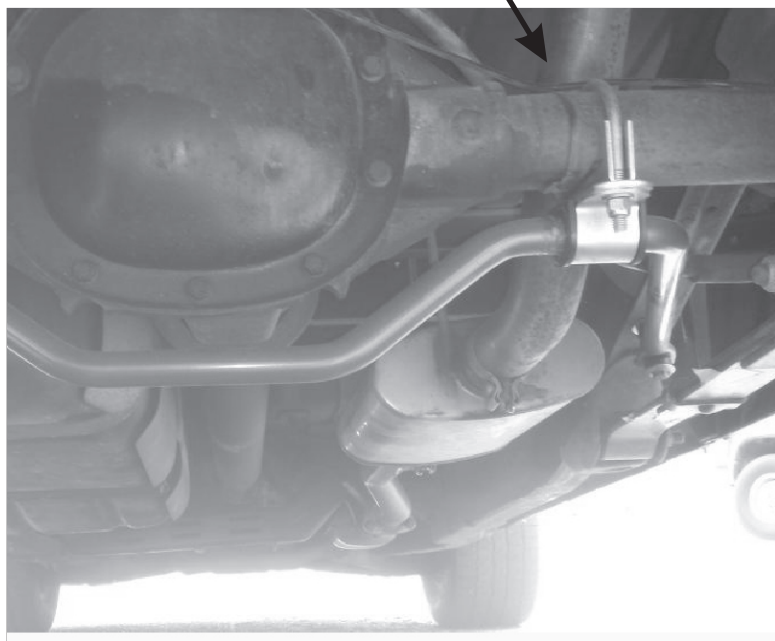

Application:

Chevrolet:
S Series Pick-Up 82-04
91-93 Syclone

Kit Contents:

1x Swaybar
2x U-bolts
2x Axle brackets
2x Flat plates
2x Saddles
2x D bushings
2x Link bolts
4x Cupped washers
6x Nyloc nuts
2x Flat washers - for link
4x Flat washers - for chassis
4x Cupped washers
8x Link bushings
1x Grease

1. Raise vehicle evenly and safely support.
2. Grease and position D bushings on swaybar.
3. Hang supplied U bolts over Axle - proceed to hang swaybar with axle brackets and plates as per image.
Confirm swaybar is central. Use supplied nuts but do not tighten yet.

NOTE - careful U bolts are not near or pressing on brake lines.

4. Assemble swaybar link bolts to swaybar initially, using supplied bushings and cupped washers - position cupped washers so they face away from bushing.
Place supplied flat washer between the 2 inner link bushings.
5. Proceed to assemble swaybar link to chassis rail - place 4x supplied washers either side of chassis rail. Position cup washers on link bushing so they face away from bushing.

Confirm link is near perpendicular to swaybar at ride height. Also confirm no clearance issues with exhaust etc.

Tighten link nyloc nuts and u bolt nuts.

NOTE - do not over tighten link bushings.

6. Road test and re-check all nuts bolts.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.