

# Instructions




## Rear Swaybar

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

**Application:** Honda Civic (excluding Hybrid)

### Install Guide

1. Raise rear of vehicle evenly and safely support.
2. Un-bolt the 4 mounting bolts as per image below.
3. Remove the OE saddles.
4. The OE Swaybar links may be re-used - un-bolt these at swaybar point.  
The stud will have to be locked with an Allen Key.
5. Remove the original Swaybar.
6. Grease the supplied D bushings with the supplied grease only. Mount these to the supplied swaybar.
7. Fit up the supplied swaybar with the OE saddles and links - tighten bolts to manufacturers specifications.
8. It is recommended your wheel alignment is checked post any suspension work.
9. Re-check bolts after initial 100kms travelled.

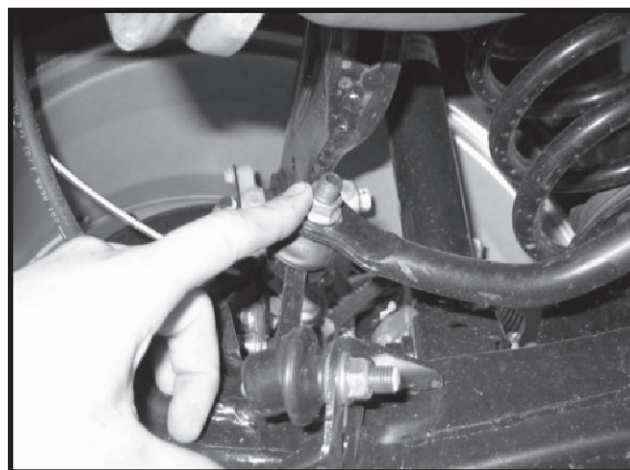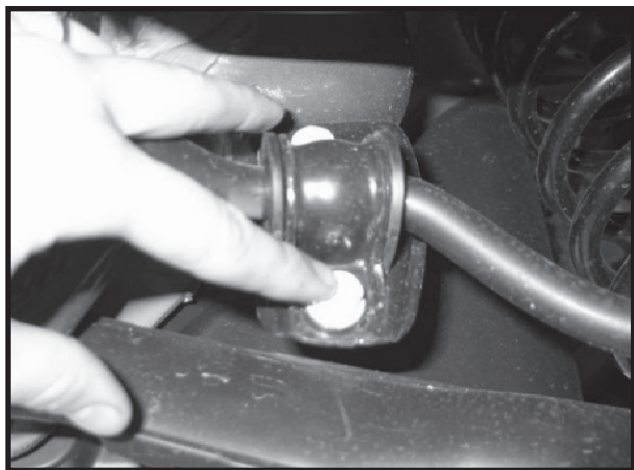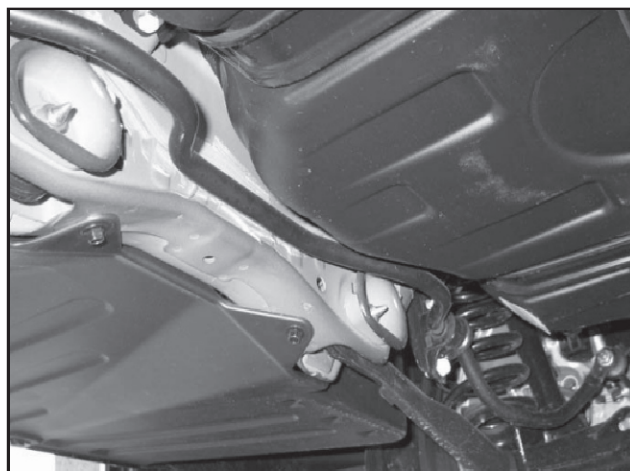

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.