

Instructions

Gearbox Mount

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Using a Jack and timber OR a Transmission Jack, support the gearbox.

- Proceed to remove rear cross-member. And Un-bolt old rubber mount.

- Clean area of any oil or grease.



- Bolt up new mount with supplied hardware.

Note - RH image - place supplied plate between gearbox and new mount.

Place mount with part number facing rear of car

Application - Ford Mustang 1966-72
- various other Ford models
(Refer current catalogue for complete listing)

Contents - 1x New Gearbox Mount
- 1x Flat plate
- 4x 7/16 Bolts
- 4x Flat washers
- 2x Spring washers

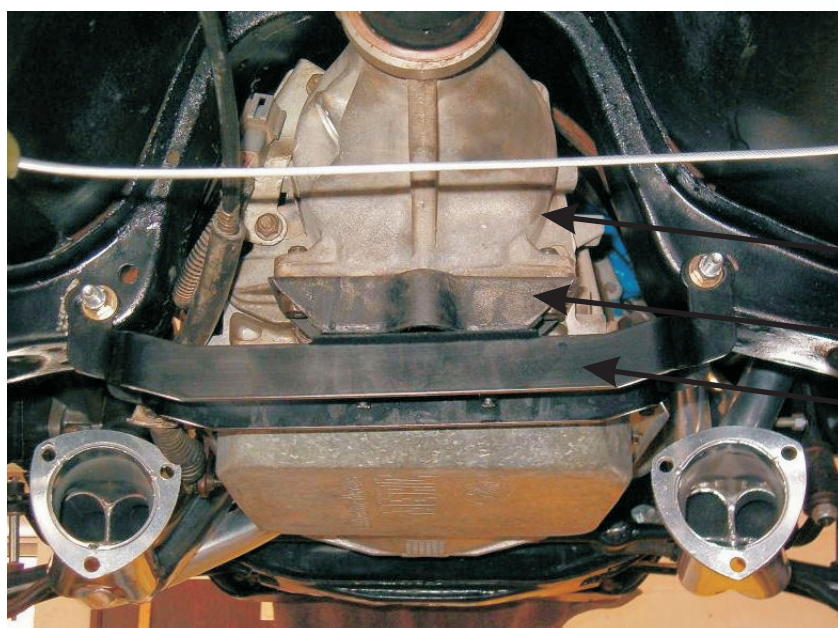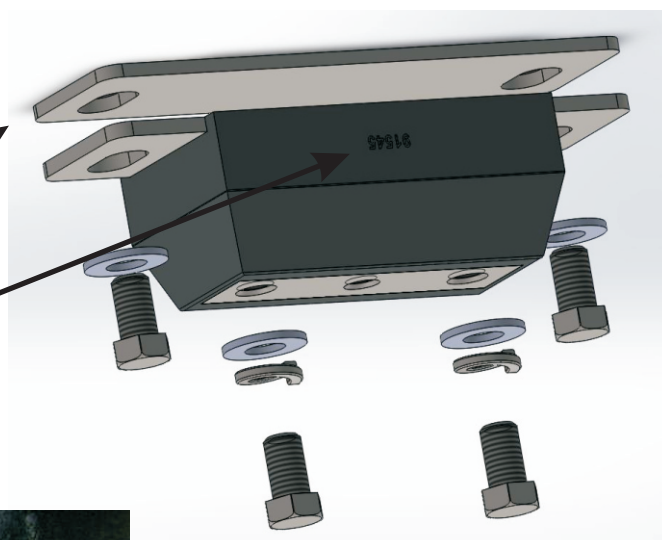

Gearbox

Original rubber mount

Cross-member

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.