

# Instructions

## Front Diff Mount Bushings

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*

**NOTE - the rubber can be removed from the factory mount bushings (the rubber is not bonded to steel outer shell)**

**Do not remove steel outer shells**

- Best method is to 'pull' the rubber out with threaded rod, nuts and washers and steel tubing - use lubricant to help move the rubber material.


- Clean Diff eyes well of any oil or dirt.

- Use supplied grease to aid with instal of new bushings.

**Application** - Chev Silverado 2500/3500  
- GMC Sierra 2500/3500

*(Refer current catalogue for complete listing)*

**Contents** - Bushing 91646 x2  
- Bushing 91647 x2  
- Bushing 91648  
- Bushing 91649  
- Grease

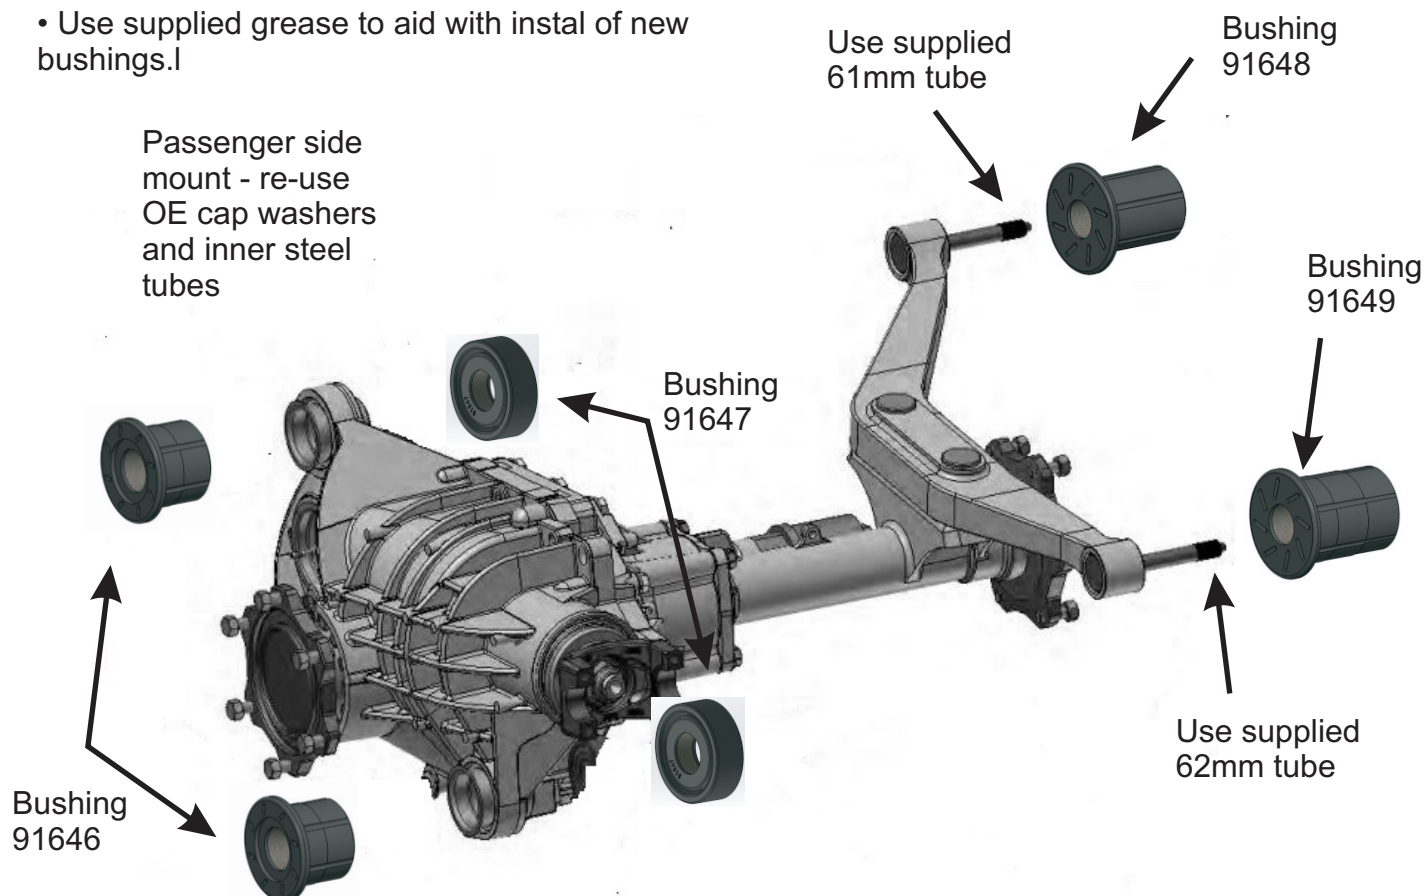

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.