

FITTING INSTRUCTIONS

Front Lower Control Arm Bush Kit.


Suits: UA Corsair / U13 Bluebird / HJ30 Maxima
U12 Pintara / P11 Primera

Contents:

| | | | |
|----------------|-----|------------|-----|
| Bush | x 4 | Crush Tube | x 2 |
| Grease Satchel | x 1 | Washers | x 2 |

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise front of vehicle, support on jack stands and remove the front wheels.
2. Remove large front nut and rear mounting bracket from control arm, remove ball joint and sway bar link pin. Slide arm forward and remove from vehicle.
3. Remove the old bushes using a suitable removal tool and discard.
4. Clean and inspect the arm eyelet for rust, paint, damage, pitting and old rubber deposits and clean or replace as necessary.
5. Fit new bushes and supplied washers into position as per **diagram below**.
6. Refit the removed control arms, **re-using original washers and nuts**.
7. Road test vehicle, and we recommend a wheel alignment be carried out.

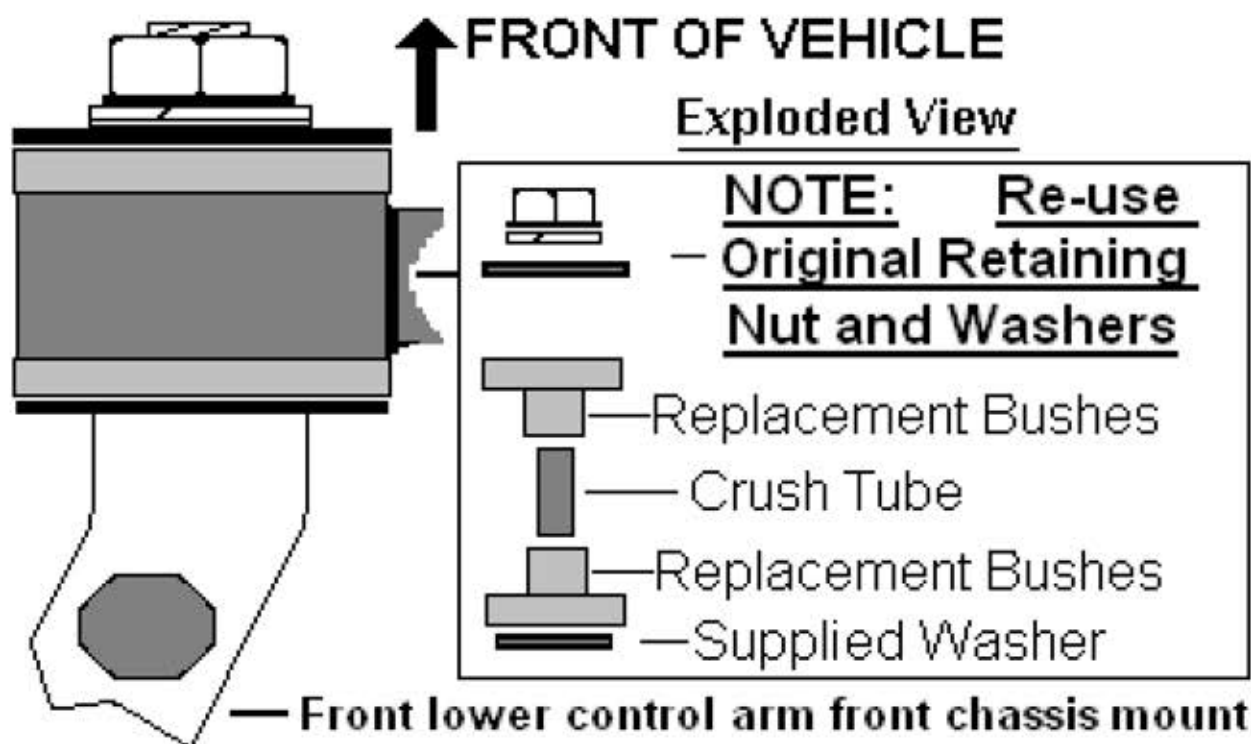

N.B: It is recommended that a licenced workshop or trades person carry out the above procedures and that workshop manual and relevant safety procedures are followed in addition to the above.