


FITTING INSTRUCTIONS

Strut Bar to Chassis Bushes

Suits- Ford Falcon, Fairlane-XP-XF/XG Models exc XC

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the front of vehicle and support with chassis stands, remove the front wheels from the vehicle.
2. Remove the front nut, washer and bushes from the front of strut rod.
3. Remove the nuts from the strut rod to lower control arm, and remove the strut rod and rear strut rod bush.
4. Clean and inspect the strut rod, washers and chassis bracket for rust, paint, damage, pitting and old rubber deposits and clean or replace as necessary.
5. Fit the new replacement bushes to the vehicle ensuring that the **FA69A** (male bush) marked **front** is fitted in the front most position, and the **FA70A** (female bush) is fitted to the rear position (refer to image below).
6. Lubricate the internal bore flange and thrust faces of the bushes with the grease supplied and fit the metal crush tubes to the bushes.
7. Refit the strut bars to the vehicle and tighten all nuts to manufacturers specifications.

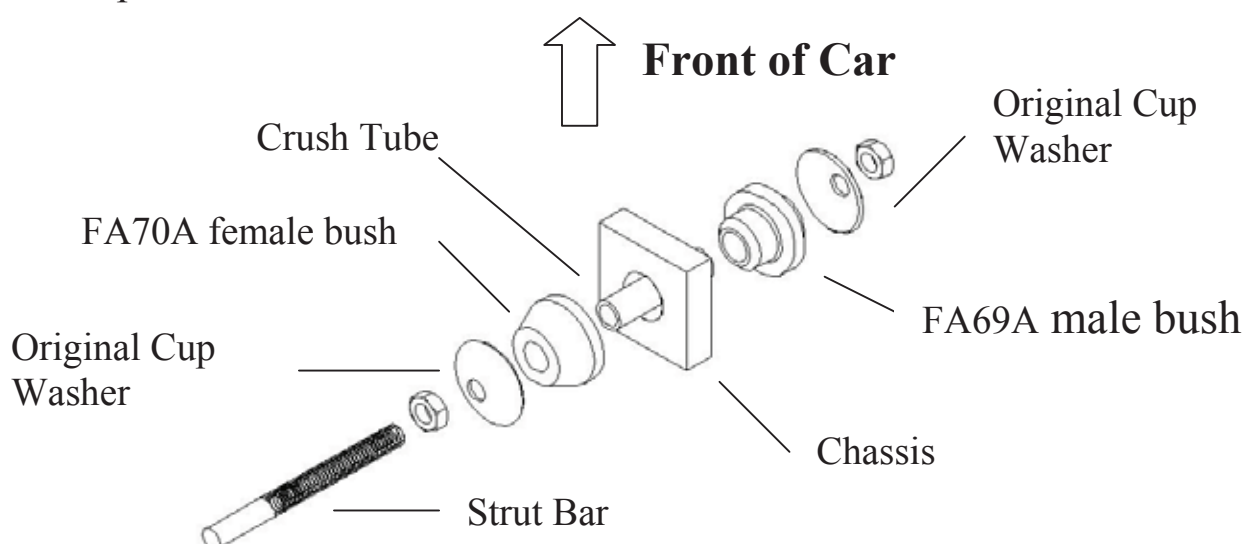

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.