

## SWAY BAR LINK KIT


- (1) Raise front of vehicle, support on stands and remove the front wheels.
- (2) Detach the sway bar links from the upper strut mounting point. Loosen the sway bar brackets to permit the sway bar to move freely in its bushes. Discard the original bushes and large washer but retain the smaller washers and lock nuts. Clean the eyes at each end of the sway bar, where the new bushes will mount.
- (3) Install a cup washer and bush on the rod making sure that the profile of the washer faces away from the bush, with the link facing upwards. Install bush and cup washer to other side of eye and secure with the original lock nut [see diagram]
- (4) Install bush and cup washer to the links and fit through existing holes in strut legs. Install bush and cup washer to end of link rod and secure with cone lock nut.

### IMPORTANT

*(6) Lower the vehicle to ride height. Tighten all cone lock nuts until bushes just contact washers and bracket on strut leg, and then tighten nuts a further 3/4 to 1 turn.*

- (7) Recheck assembly after test drive.

*Kit contents: 4 x bushes.*

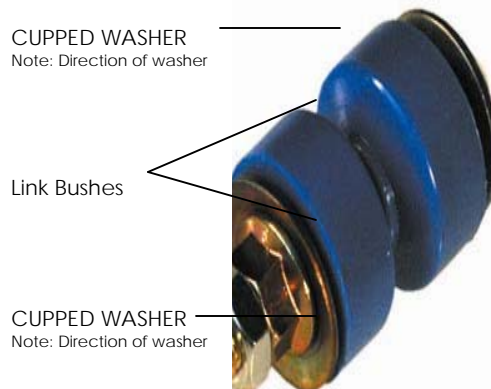

Note: This procedure must be carried out by a qualified person.