

Installation Guide


Rear Toe Link Inner Bush Kit - IRS only

Z 5041

Suits: Falcon AU - IRS only

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.
All fastener torque settings should be adhered to.

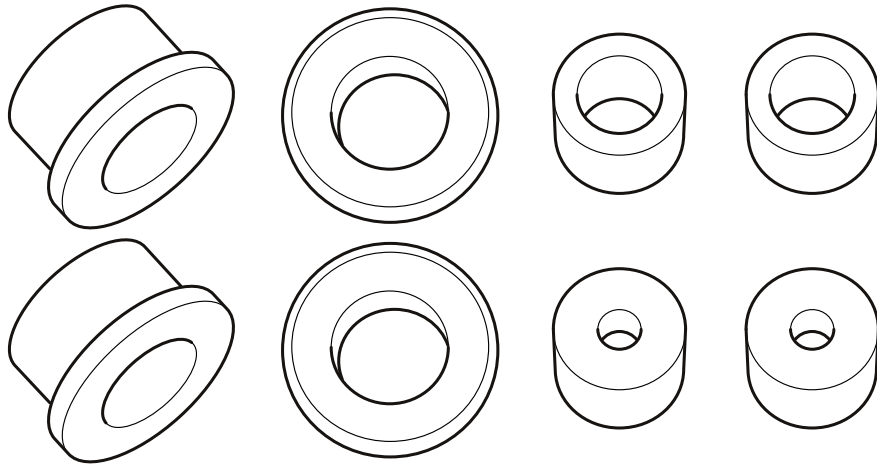

4 x BUSH 6246

2 x TUBE ID 12.2 mm = USE WITH 12mm OD BOLT

2 x TUBE ID 9.1 mm = USE WITH 9 mm OD BOLT

NOTE: 1 SET OF SUPPLIED TUBES WILL NOT BE USED

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Installation Guide


Rear Toe Link Inner Bush Kit - IRS only

Z 5041

Suits: Falcon AU - IRS only

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.
All fastener torque settings should be adhered to.

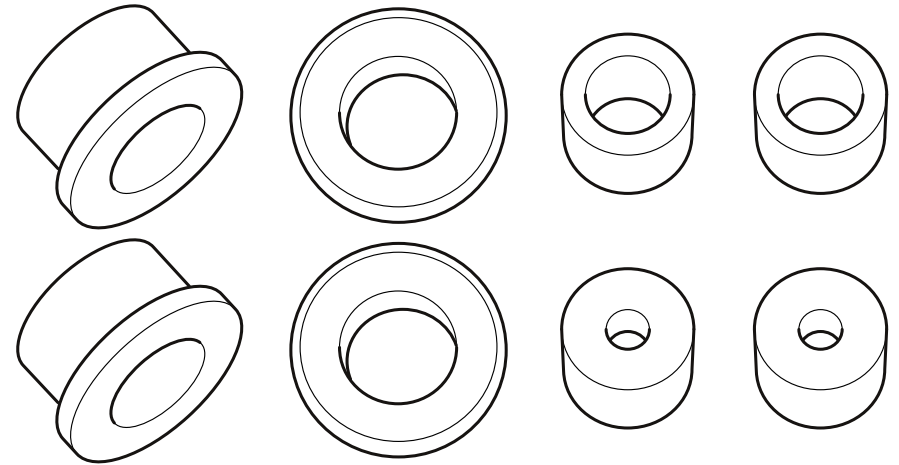

4 x BUSH 6246

2 x TUBE ID 12.2 mm = USE WITH 12mm OD BOLT

2 x TUBE ID 9.1 mm = USE WITH 9 mm OD BOLT

NOTE: 1 SET OF SUPPLIED TUBES WILL NOT BE USED

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.