

Installation Guide


Rear Control Arm Camber Adj

Suits: Mitsubishi Lancer

Z 5119

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

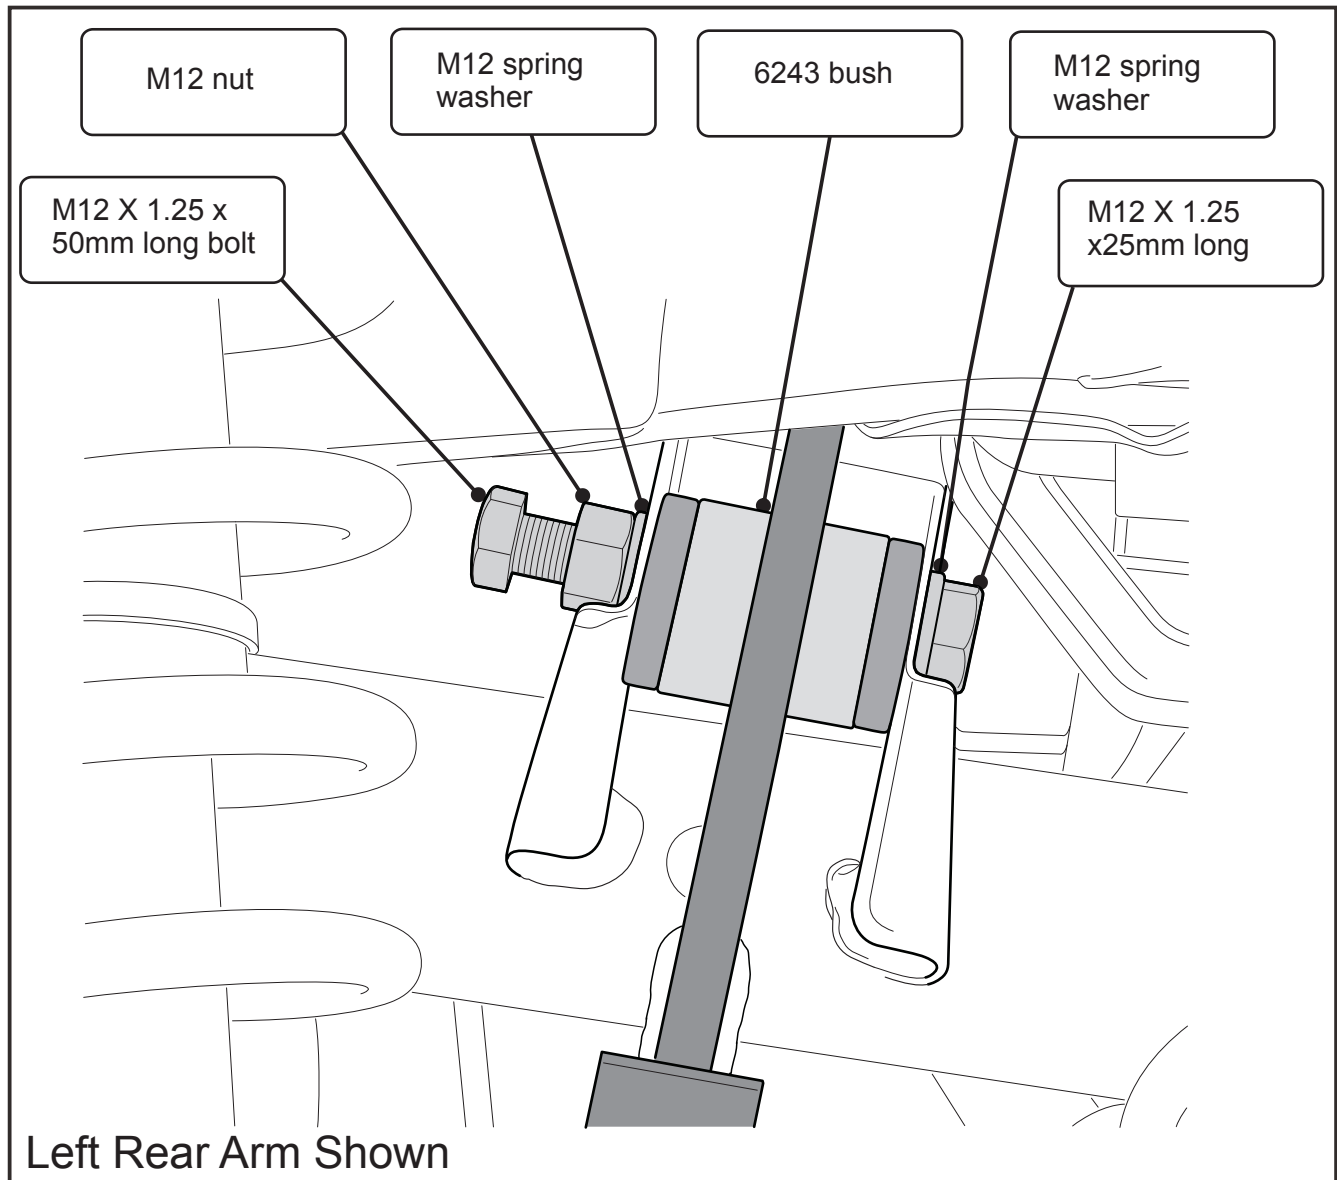

- ❑ Install the M12 nut on to the M12x50 long bolt along with the spring washer. install the long bolt into the offset tube so the bolt faces rearward and bottoms out in the centre of the offset tube.
- ❑ Install the supplied spring washer on to the M12x25 short bolt and install into the offset tube.
- ❑ To adjust rotate the long bolt clockwise making sure the nut and short bolt is loose. When the desired alignment angle is reached tighten the short bolt first until tight followed by the locking nut on the long bolt.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.