

# Instruction Sheet

## FRONT SWAY BAR LINK

Z5365

Rev A

### Application:

Front sway bar link kit is designed to replace the high compliance original equipment versions on most Subaru Impreza, Liberty (Legacy) and WRX models. Always refer to latest catalogue to full application listing.

The kit utilises a high tensile extruded alloy link fitted with ultra low compliance polyurethane bushes. Critical hardware is replaced with high tensile components to match the higher loads.


### Contents:

Kit contains the following hardware parts;

- 2 x M10 high tensile bolts
- 2 x M8 high tensile bolts
- 2 x M10 nyloc nuts
- 2 x M8 nyloc nuts
- 2 x M10 \* 32mm washers (large)
- 2 x M10 \* 22mm washers (small)
- 2 x M8 washers
- 2 x extruded alloy link/bush assemblies
- 1 x grease bag

### Fitting instructions:

1. Fitment must be done with the vehicle at normal ride height, however a drive-on ramp/hoist may be used for easier access to the undercarriage. DO NOT raise the body alone.
2. Remove and replace the original links and hardware with the new components supplied in the kit as per the Picture 1 below.
3. Tighten all mounting hardware.
4. Check and retention all fittings after an appropriate settling in period but within 100kms of fitment.

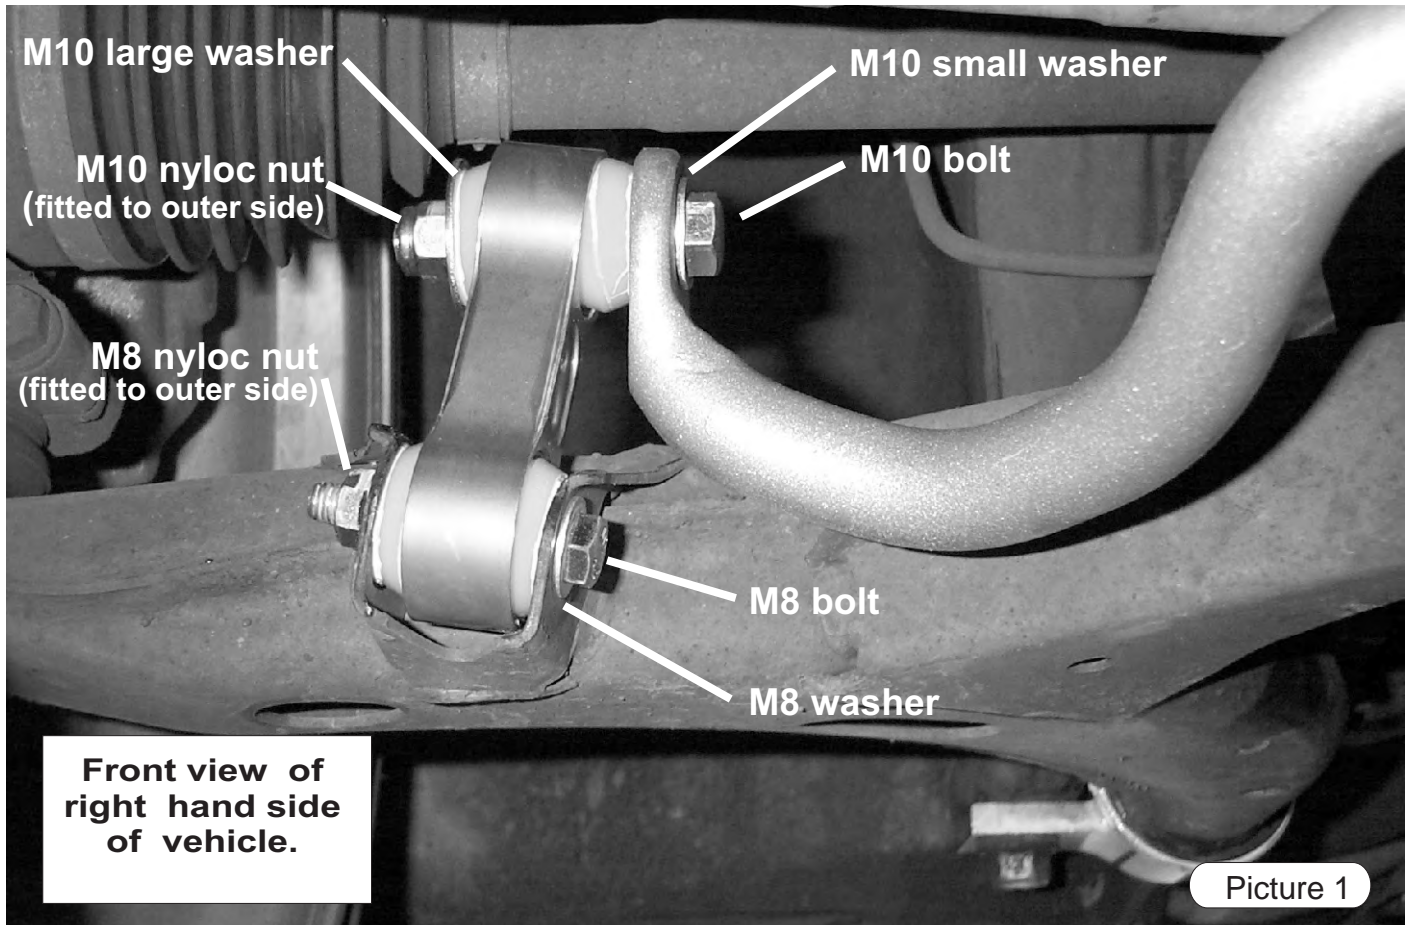

**Warning:** Please drive carefully while you accustom yourself to the changed vehicle behaviour.

A.B.N. 99 124 177 297