

Instructions

Rear Shackle Bushing


N.B: This instruction sheet should be used in conjunction with the workshop manual.

Application:
VW Amarok - 09/2010 - on

1. Raise vehicle evenly and safely support.
2. Completely remove shackles from vehicle.
3. Remove OE rubber bushing - this is 1 piece - a press will be required.
4. Once original bushing is removed, measure shackle eyelet ID

There are 2 different size bushings supplied in kit;
Use bushings 68653 for 30mm ID
Use bushings 68695 for 32mm ID

5. Push supplied 2-piece bushings in place.
Grease bushing ID and face.
6. Fit supplied steel tube - re-fit shackle to vehicle.
7. Tighten bolts to manufacturers specs.

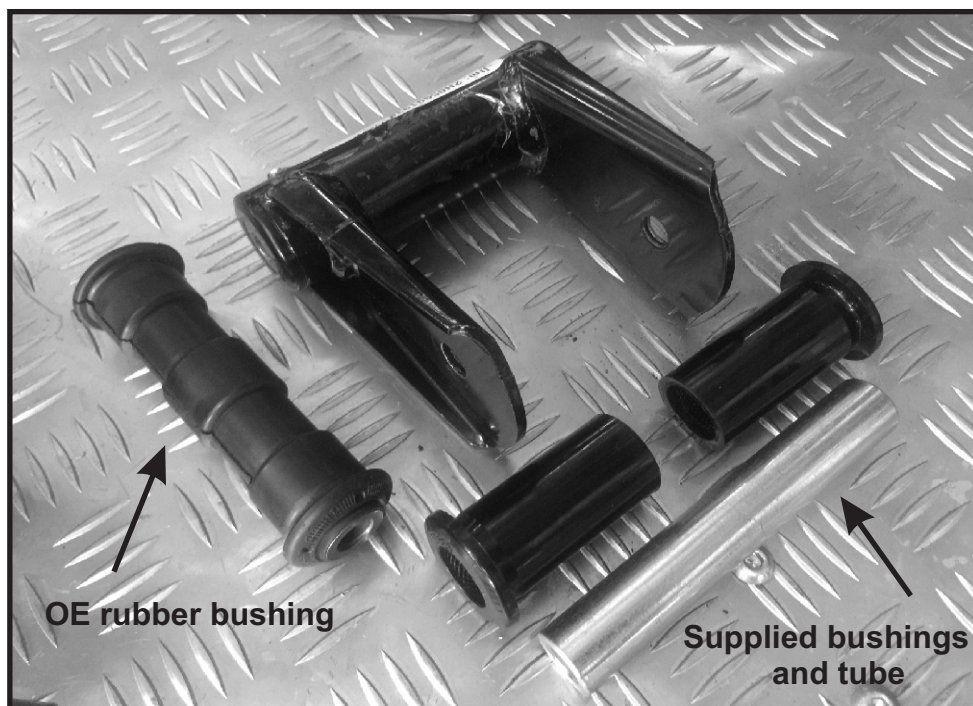

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.