

# Instructions


## Rear Swaybar Kit

**Application:** A-Body vehicles - 1964-1972

This swaybar kit is designed for vehicles originally fitted with OE swaybar.

**Kit Contents:**

- 1x Swaybar
- 4x Bolts
- 4x nuts
- 8x Washers

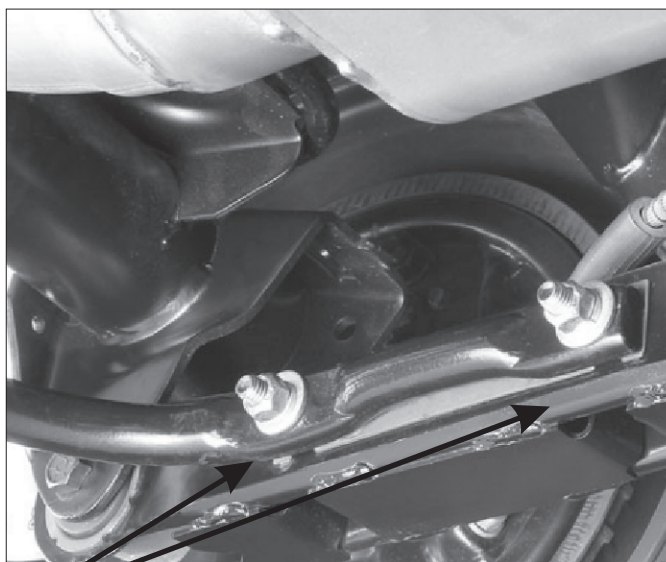

Replace 4 mounting bolts with supplied items

1. Raise vehicle evenly and safely support.
2. Remove rear OE swaybar by removing the 4 mounting points.
3. Clean trailing arm mounting surface from any dirt or rust.
4. Proceed to bolt supplied swaybar to lower trailing arms - start all hardware but do not tighten.
5. Once swaybar is in position, confirm clearance is ok with exhaust etc.
6. Tighten hardware at ride height.
7. Road test and re-check all bolts.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.