

Instructions


Rear Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application: Ford Mustang - Live Axle
1979-2004

Kit Contents: 2x major bushings.
2x minor bushings
2x steel tubes
Grease

Do not remove OE outer shell

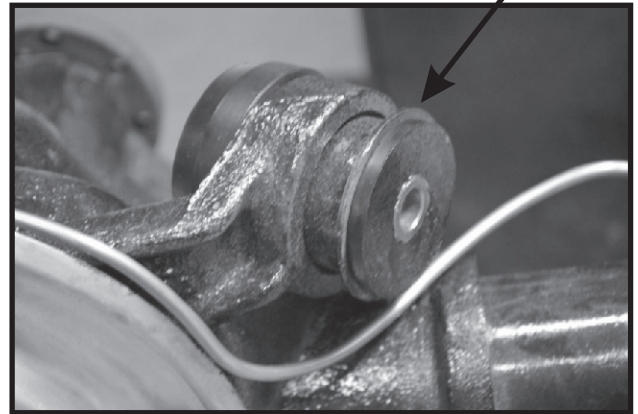

1. Raise vehicle evenly and safely support.

Note - It is recommended only remove one Control arm at a time.

2. Proceed to remove the rubber bushing - this can be achieved with heat. Do not damage or remove the OE outer steel shell.
3. Insert supplied major bushing from the outside of Eyelet - please see images.
4. Place supplied minor bushing on inside. Grease bushing ID and face with supplied grease only.
5. Re-fit arm to vehicle - but only tighten bolts at vehicle ride-height.
6. Tighten bolts to manufacturers specifications - re-check after 100kms travelled.

Insert major bushing from outside of Eyelet



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.