

Instructions Rear Swaybar

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

1. Raise rear of vehicle evenly and safely support.


Never rely on a Jack only.

Application - Corvette C6 & Z06
- 2005-2011
(Refer current catalogue listing)

2. Proceed to loosen rear swaybar links (but do not completely remove nuts) - note image below - 2 spanners will be required to prevent stud from rotating.

Contents -1x 30mm swaybar
- 2x mounting bushings
- Grease


3. Un-bolt saddles from sub-frame - remove saddles from factory mount bushings. The original saddles will be re-used.

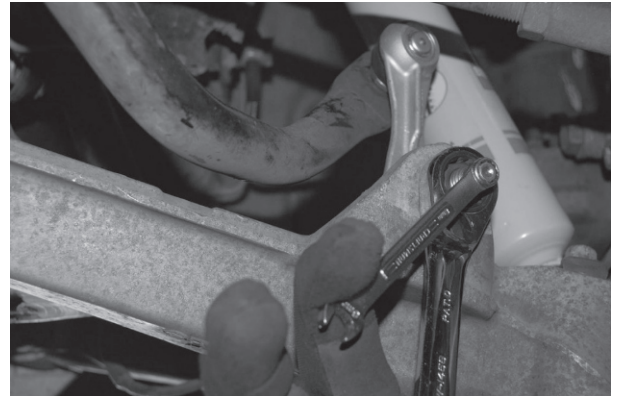

4. Grease new bushings with supplied grease only. Fit new bushings to 30mm swaybar.

5. Bolt up new swaybar - tighten bolts to manufacturer spec.

6. Re-check bolts after 100kms travelled.

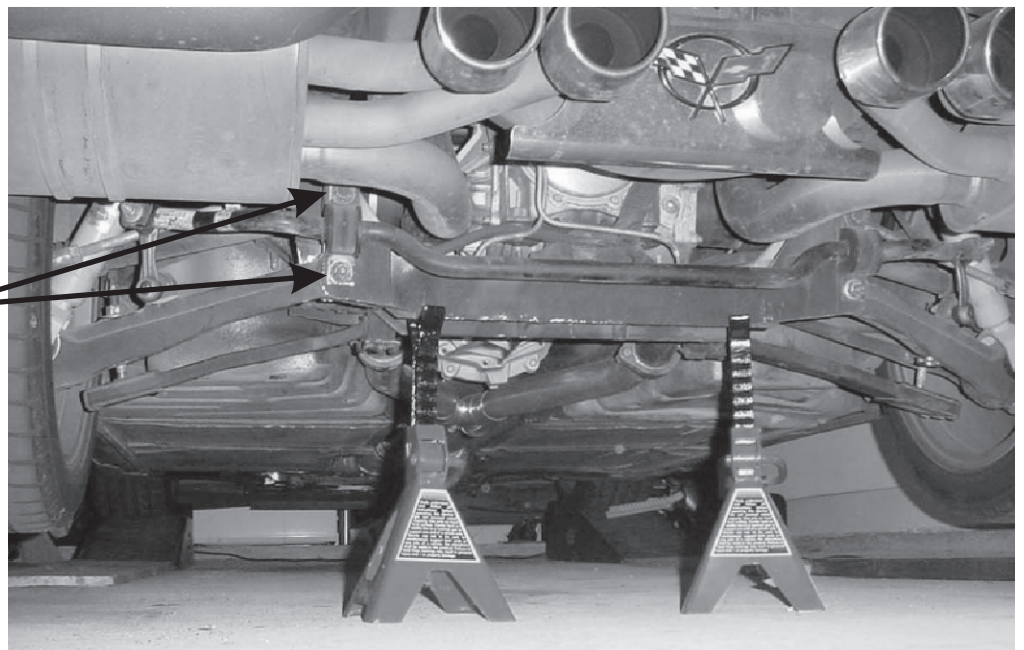

Re-use factory saddles and bolts

Support vehicle with safety stands

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.